

CTCSS TONE FREQUENCY CHART

CHANNEL	FREQUENCY (Hz)	CHANNEL	FREQUENCY (Hz)
1	67.0	26	156.7
2	69.4	27	159.8
3	71.9	28	162.2
4	74.4	29	165.5
5	77.0	30	167.9
6	79.7	31	171.3
7	82.5	32	173.8
8	85.4	33	177.3
9	88.5	34	179.9
10	91.5	35	183.5
11	94.8	36	186.2
12	97.4	37	189.9
13	100.0	38	192.8
14	103.5	39	196.6
15	107.2	40	199.5
16	110.9	41	203.5
17	114.8	42	206.5
18	118.8	43	210.7
19	123.0	44	218.1
20	127.3	45	225.7
21	131.8	46	229.1
22	136.5	47	233.6
23	141.3	48	241.8
24	146.2	49	250.3
25	151.4	50	254.1