

### Programming the ATIS ID Number

1. With the radio powered OFF, simultaneously press and hold the HI/LO key and the BAND key.
2. While still depressing the two keys, turn ON the radio.  
The ATIS ID programming screen is displayed as follows.



The left digit indicates the digit position of the ATIS ID; the right digit, which blinks continuously, indicates the value of that digit.

3. Use the CH UP/DOWN key to change the first digit to the correct value for your particular ATIS ID. The ATIS ID is a ten digit number that always begins with a "9". You will only be entering the last nine digits; the first "9" is automatically entered for you. So, although it is technically the second number in the sequence, it is the first digit you will be entering. For example, if your ATIS ID = 9 244 03 8 0 7 5 and remembering that the initial "9" has already been entered for you, press CH UP/DOWN until the "2" appears, as follows.



4. When the correct value is flashing, press MEM key for 3 seconds to confirm the selection. The next digit position and its value appear.
5. Press CH UP/DOWN to change the second digit to the correct value. Using our example of ATIS ID = 9 244 03 8 0 7 5, press CH UP/DOWN until the 4 appears.



6. Continue this process until all nine ATIS numbers have been entered.
7. You must now re-enter the ATIS ID a second time to confirm. After entering a valid ATIS ID for the second time, the radio flashes its complete ATIS ID. The nine ATIS ID number pairs are flashed in sequence, one set at a time on the screen.

In our example, the sequence would be:

1 2  
2 4  
3 4  
4 0  
5 3  
6 8  
7 0  
8 7  
9 5

When complete, the radio returns to the last-used mode. If no channel is found in the memory, the radio reverts to CH 16 at High Power setting. If a different ATIS ID is entered the second time, the operation is cancelled and a long alarm tone is sounded.

8. Store the ATIS ID permanently into the radio by turning the radio OFF.  
To exit ATIS programming mode without saving, press the 16 key at any time to jump to priority Channel 16. **Note:** After this programming, only your distributor can modify or erase the ATIS ID.

#### **Reset ATIS ID**

1. With the radio powered OFF, simultaneously press and hold the HI/LO key and the BAND key and PTT.
2. While still depressing the three keys, turn ON the radio. The following steps like Programming the ATIS ID Number.